


**NOTE:** BRINE SHOULD BE DISCHARGED UNRESTRICTED TO A SUITABLE DRAIN OR DISCHARGE SITE

**NOTE:** ENSURE SUBMERSIBLE FEED PUMPS ARE NO MORE THAN 20 VERTICAL FEET FROM AQUIFER CASE. DASHED STRAINER FOR AF360 ONLY

**NOTE:** SEE DETAIL VIEW 1 BELOW TO ENSURE HIGH PRESSURE TUBING IS CONNECTED TO CORRECT PORTS.

**NOTE:** PRODUCT WATER TUBING MUST BE ROUTED INTO THE TOP OF A PROPERLY VENTED TANK OR STORAGE CONTAINER. BACK PRESSURE WILL DESTROY MEMBRANE!


Detail View 2: AF 360 High Pressure Hose Routing

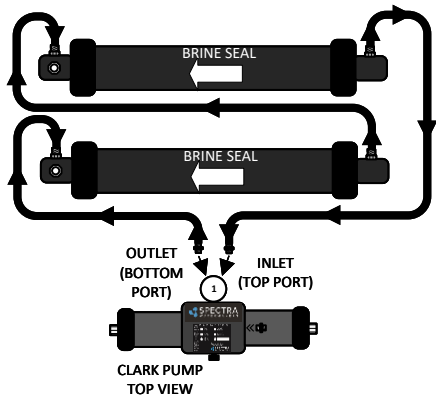

KEY: LIST OF SYMBOLS

	HIGH PRESSURE TUBING, 1/2" BLACK HP HOSE
	SEAWATER INLET HOSES, 1/2" CLEAR VINYL
	BRINE DISCHARGE HOSE, 5/8" CLEAR BRAIDED
	PRODUCT WATER TUBING, 1/4" CLEAR VINYL

Detail View 1: Clark Pump Back View

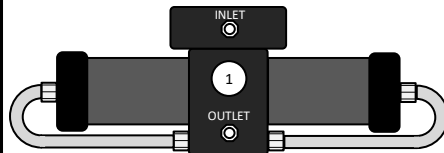

Revision History:

Rev No:	Date:	Description:
A	04/03/2023	Initial Plumbing Diagram for Aquifer Flight Ready 200/360 Systems

Aquifer 200/360 EX-FL

Revision: A  
 Rev Date: 04/03/2023  
 Print Date: 04/03/2023  
 Drawn by: JCM

Katadyn Desalination