

Mobile Microfiltration System MOT-7

Water treatment by microfiltration with Katadyn
ceramic filters



1	General Instructions for Mobile Microfiltration System MOT-7	3
1.1	General Safety Guidelines	3
1.2	Intended Applications	4
2	Warranty and Product Liability	5
3	General Description	6
3.1	The microfiltration process	6
3.2	Primary features of mobile microfiltration	6
3.3	Primary uses for microfiltration	6
3.4	Assembly of the Military MOT-7	7
3.5	Water bacteria concentration	7
3.6	Installation requirements of components	8
3.7	Flow rates of the MOT-7	8
4	Pump Unit	9
4.1	SKB Cases – Waterproof cases for industrial use	9
4.2	Pump Honda WH 20 X	10
4.3	Setup Procedure	11
5	Filter Unit	12
5.1	Setup procedure	12
6	Operational Procedures	14
6.1	Brief description of the handle position of operational components	14
6.2	Filling / Venting	14
6.3	Operation	14
6.4	Emptying the filter unit	15
6.5	Water Sampling	15
7	Maintenance and Service	16
7.1	Honda Handbook reference	16
7.2	Cleaning the filter elements	16
7.3	Examining the filter elements	17
7.4	Troubleshooting Guide	17
8	Contact information	17
9	Replacement Parts and Filters	18

1 General Instructions for Mobile Microfiltration System MOT-7

Congratulations on your selection of the mobile Microfiltration System MOT-7 from Katadyn used for the clarification and purification of water. Thank you!

With the use of this system, you will be able to remove the microbial organisms from natural water.

These instructions will explain what you need to do to assemble and operate the system, as well as what is needed for regular maintenance and troubleshooting or repairs in conjunction with this treatment system.

Substances such as minerals and salts in treated water will remain unchanged. Water will also not be softened. Desalinating seawater is also not possible.



Pathogenic agents that cause the following diseases will be filtered: Typhoid, dysentery, amoebic and bacterial dysentery, bilharzia, cholera, Colibacillosis and Giardia. If you require information about bacteria not mentioned above, please contact the experts at Katadyn who will gladly discuss further details.






1.1 General Safety Guidelines

The mobile Microfiltration System MOT-7 from Katadyn has been factory tested. The dangers of improper use or failing to follow the operating procedures outlined in this manual may include:

- Water of unsafe microbial quality given to people or animals or industrially manufactured products using unsafe water or other fluids.
- The health and safety of operating personal:
Burns from touching hot surfaces or components.
Crushing, pinching or contusions caused by unintended handling of moving parts.

All persons who will be involved with the setup, startup, operations, maintenance and repair of the mobile Microfiltration System MOT-7 must be qualified and trained in its use and have read these instructions. They must also thoroughly read and understand the accompanying Honda Handbook from the company Honda Power Equipment. This is vital in maintaining their safety as well as avoiding the delivery of water that remains contaminated after the microfiltration.

	<p>The instructional manual must be read and completely understood before operating the mobile Microfiltration System MOT-7</p>
	<p>Before operating the mobile Microfiltration System MOT-7 or performing any work with the Honda Water Pump WH20X, the Honda Handbook must be read and understood.</p>



	Safety gloves with sufficient protection must always be worn when performing any maintenance on the mobile Microfiltration System MOT-7.
	Always properly dispose of waste products, in particular fluids in the pump unit, at designated locations or with specialists.
	In order to avoid accidents and possible work disability resulting from accidents due to improper operation of the Katadyn mobile Microfiltration System MOT-7, please observe and follow pertinent safety procedures. Improper handling of the Katadyn mobile Microfiltration System MOT-7 can put health at risk. Operating/handling duties may only be performed by trained personnel.
	Only open the filter chamber when it is unpressurized and emptied.
	Before cleaning, maintenance, repair or replacement of parts, the hydraulic unit must first be depressurized, and the pump unit turned off. These duties may only be performed by trained personnel.

1.2 Intended Applications

Only use the mobile Microfiltration System MOT-7 as well as any accompanying accessories / components per manufacturer's instructions. Intended usage is discussed in these instructions.

In order to ensure the mobile Microfiltration System MOT-7 can perform the described level of treatment, the parameters set out must be followed. In addition, the physical and chemical parameters for drinking water as required by state-specific requirements for drinking water fit for human consumption must also be adhered to.

The mobile Microfiltration System MOT-7 has been designed and built based on state-of-the-art technology, in order to provide safe operation when safety regulations and operating requirements are followed.

	Working on the mobile Microfiltration System MOT-7 as well as operation and use of the system is permitted only when the unit is in good condition technically and when attention is paid to safety standards and to potential hazards as described in these operation instructions, the handbook, as well as in this supplement. Only when these are followed without exception can operators and others avoid the loss of life and serious injuries or avoid interference with the system's operation or other material assets.
	Appropriately trained specialist must immediately repair malfunctions, damage, or resolve abnormal operations that could compromise safety!

2 Warranty and Product Liability

Manufacturer product liability and warranty is invalid in the case of damage and injuries stemming from operations, installation or maintenance not in compliance with system operations.

For example:

- Operational errors resulting from not being in compliance with safety, operations, and maintenance instructions and improper repairs.
- Improper use of the MOT-7 (use not in compliance with instructions).
- Use of repair parts not permitted by the MOT-7 manufacturer.
- Operators not using protective gear as described.
- Modifications of the MOT-7 without written permission from the manufacturer.
- Conducting improper work with tools inappropriate for the MOT-7.
- Failure to follow regular service and maintenance schedules.
- Improper Installation or operation of the MOT-7.

3 General Description

3.1 The microfiltration process

The Katadyn filter element is based on the functional principle of depth filtration. Filtration is a process of separation that can be produced by the mechanical and physical force of the ceramic structure. Thus, sediment and microorganisms are retained in the small pores of the ceramic material. This filtration effect is dependent on the size of the pores and the thickness of the ceramic layer. Depth filtration has a particular characteristic: Even particles smaller than the total pore size are retained on the inside of the ceramic based on the principle of adsorption. Katadyn ceramic filters are made from various natural raw materials of the highest quality standard. As such, we can attain a nominal pore size of 0.2 µm with insignificant variations.

3.2 Primary features of mobile microfiltration

- Reliable treatment and filtration
- Robust design
- Low maintenance costs
- Simple cleaning by hand with a brush
- Stand-alone operation: no electricity or other infrastructure needed
- System can be transported by 2 people; only 1 person is needed to operate
- Modular system accommodates up to 3 filter units operated with one pump
- Filter and motor/pump units come each packed in one box
- Weight: 55 kg per box
- Box size (LWH): 72.4 cm x 71.8 cm x 68.2 cm

3.3 Primary uses for microfiltration

Civil protection, military (drinking water, emergency water supplies)

Drinking water (groundwater, spring water, surface water)

Beverage industry (drinking water, processing water, rinsing water)

Food industry (water for manufacturing, rinse water)

Milk processing (water for processing at dairies and cheese-making facilities)

Agriculture (Water for livestock, feed lot operation)

Mountain restaurants, huts (drinking water, washing water)

Shipping, offshore platforms (drinking water, rinsing water)

3.4 Assembly of the Military MOT-7

MOT-7 consists primarily of two main components: the filter unit and the pump unit.

The pump unit's task is to supply the untreated water from available water sources, to transport it to the filter unit, and to produce the needed system pressure for filtration.

The MOT 7 is designed in two pieces to enable the user to set up the system in a flexible configuration based on the landscape. This allows for the pump unit to be positioned close to the water source while locating the filter unit in the best position for accessing the purified water. This location should be where the filter unit cannot be submersed in untreated water and the surface is dry and stable.


Maximum static suction lift of 5 meters may not be exceeded.

The supplied hose mounted between the pump and the filter limits the delivery lift/distance. As needed, this hose can be replaced with a longer one, although the total pump-to-filter distance should not exceed 30 meters. The water quantity that can be expected is represented on the graph on the next page. The quantities noted are based on new, or newly cleaned, filter elements. As the filter elements become dirtier, the flow rate also decreases accordingly.

Intervals between cleanings can be influenced positively with the appropriate placement of the suction hose. Placing the hose directly under the surface of the water or on the bottom of the water source should be avoided.

3.5 Water bacteria concentration


- **Nutrients**
In muddy ground, bacteria can multiply quickly, thanks to an outstanding supply of nutrients. Thus, if possible, do not place the intake filter in the mud or slime.
- **Varying water temperatures**
Higher temperatures promote the growth of bacteria. Standing and slowly moving water is warmer at the surface. Deeper water has lower bacteria concentrations.
- **Bacteria concentration**
More rapidly flowing water has lower levels because the water churns and becomes diluted. Be aware that churned-up sand can clog the filter.

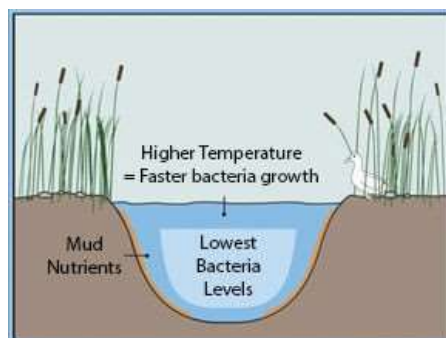

3.6 Installation requirements of components

Filter Unit: Stable positioning Comfortable operational height for water delivery and filter cleaning Placement on a dry surface Total distance < 30 meters	Pump Unit: Stable positioning near water supply	Intake position / filter: Static suction lift < 5 meters Positioned near best water quality if possible
--	---	--

3.7 Flow rates of the MOT-7

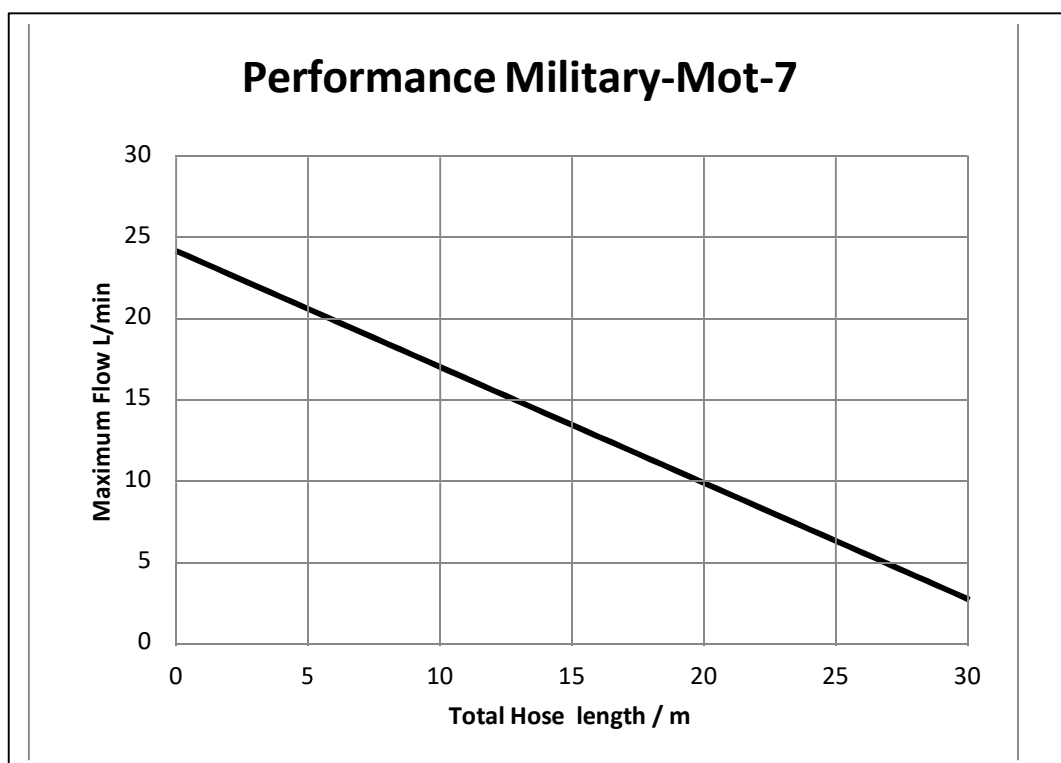

The above chart shows the typical performance of the unit when operated in the standard operating conditions described in this manual. Increasing the static resistance of the system through the use of a longer supply and connection hoses will reduce the volume of purified water. Optimal positioning of the intake hose (reducing dirt intake) and reducing the hose lengths increases the performance of the MOT-7.

4 Pump Unit

The Pump unit consists of a waterproof case, a high-pressure pump WH20X by Honda as well as a suction hose with the intake filter. The shape of the case allows safekeeping of the motor in the rear, as well as a section of 11cm x 45cm x 55cm (LWH) that offers a place for safekeeping of operating fluids. The suction hose including intake filter can be rolled and stored here after use.



4.1 SKB Cases – Waterproof cases for industrial use

- Waterproof cases from SKB fulfill the highest demands on safety, durability and ruggedness.
- That is guaranteed by SKB with its “Million Mile Guarantee” – as good as a lifetime warranty for the product.
- SKB 3i case approvals
 - MIL-STD-648C automatic ambient pressure equalization value
 - MIL-STD-810F UV stable, solvent, corrosion and fungus resistant, resists impact damage
 - MIL-STD-C-4150J waterproof and absolutely vapor proof
 - IP67 protection class for housing electrical equipment per DIN EN 60529 standards
 - ATA 300 Rated airfreight allowance of the highest ATA (Air Transport Association category (Category 1).
- Can withstand a minimum of 100 one-way air shipments and normal cargo handling stresses.



4.2 Pump Honda WH 20 X



WH 20X – extremely sturdy

The high-pressure pumps of the WH series are outfitted with the most durable and long-lasting Honda GX engines. The powerful engine and especially sturdy housing enable strong water delivery pressures with a water capacity of up to 500 liters per minute.

Capacity (l/min)	500
Capacity (m³/h)	30
Static suction lift	8 m
Port diameter	2"
Motor type	OHV GX 160
Rated output	3.6 kW
Rated speed	3600 U/min
Tank Capacity	3.1 L
Consumption (l/h)	1.6
Measurements	(LxWxH) 435 x 375 x 400 mm
Weight	23.5 kg



Please refer to the accompanying Honda Manual regarding the correct handling of the high-pressure pump WH 20X. Both this manual and the manual from Honda must be read and completely understood.

Your safety depends on it!

4.3 Setup Procedure



- Remove the pump unit from its storage carton and position it near the intended water site according to operating instructions.
- Check the oil and fuel types and levels according to the Honda Handbook.



- Connect the suction hose for untreated water to the pump and position the intake filter in the water at the intended site based on the description in the operating instructions.

5 Filter Unit

The filter unit consists of a waterproof case, filter housing including fittings and framing, a filter cover including a vent valve, a filter housing gasket, seven No. 5 filter elements, a pump-to-filter connection hose, a cleaning hose, a clean water hose, a measuring gauge, and a handheld cleaning device. The case is shaped to allow appropriate safekeeping of the filter in the front area, with room also for the clean water hose, the cleaning hose and the O-ring seal. In the rear area, you can store seven No. 5 filter elements as well as the measuring gauge. Next to this fits the cover of the filter housing as well as the handheld cleaning device. The pump-to-filter connection hose unit can be stored above the foam insert.



5.1 Setup procedure



- Remove the filter unit from its storage carton and position it at the appropriately comfortable height for operation and maintenance. Take care that the filter unit is placed in a stable position and that the location surface is dry.



- Loosen the locking mechanism and lift the filter holder to place it in the higher of the working positions. Then pull the locking mechanism closed again.



- Remove the No. 5 filter elements from the storage area and screw them hand-tight into the filter housing. Pay particular attention that that you do not tighten them too much. Over tightening can damage the filters



- Next, lay the O-ring seal over the top.
- Then, close and lock shut the filter housing with the cover and clamp collar.



- Connect the filter unit to the pump with the pump-to-filter connection hose.
- Connect the clean water hose with the filter unit.





- Hook up the cleaning hose to the corresponding threads. The MOT-7 is now ready for use.

6 Operational Procedures

6.1 Brief description of the handle position of operational components

Main Valve A	Horizontal ↔	In operation
	Vertical ⇅	Emptying, storage
Vent Valve B	Horizontal ↔	In operation
	Vertical ⇅	Venting
Cleaning Valve C	Horizontal ↔	In operation
	Vertical ⇅	Flushing
Sampling Valve D	Vertical ⇅	Sampling
	Horizontal ↔	In operation



6.2 Filling / Venting

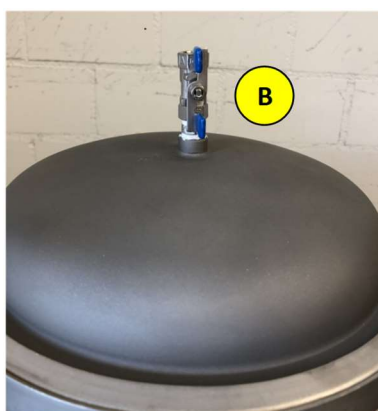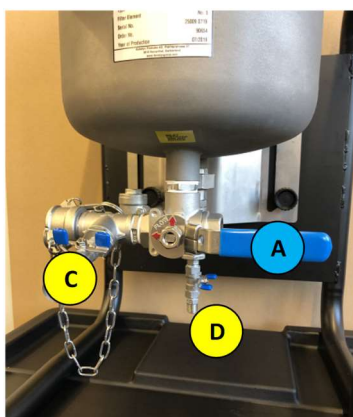

- Start the motor
- Turn the main valve A to a horizontal position
- Open vent valve B just slightly
- When water appears, close vent valve B (Caution: Water may begin flowing forcefully!)



Now the mobile microfiltration system MOT-7 is ready for use

6.3 Operation

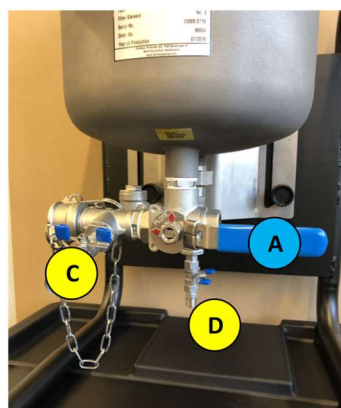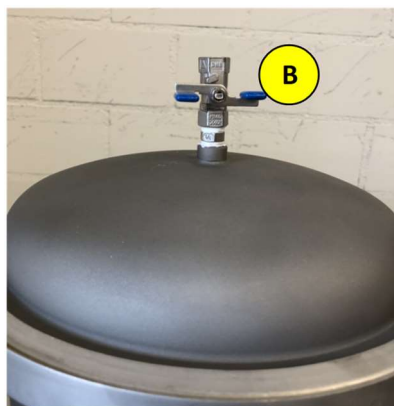

- When in use, the operational components will be in the positions as depicted.


6.4 Emptying the filter unit

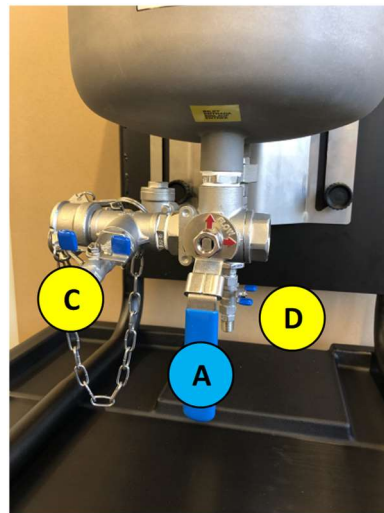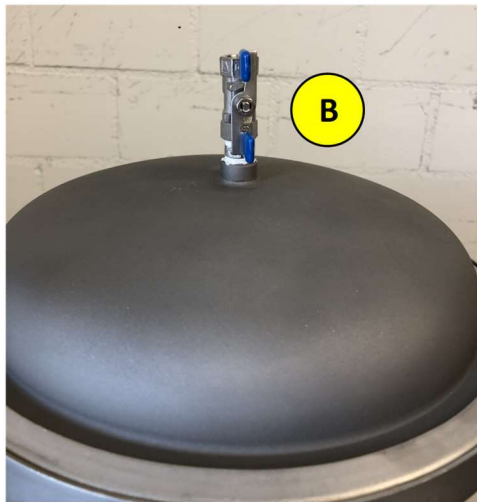

- Turn off the pump
- Open vent valve B
- Turn the main valve A to a vertical position (emptying)

6.5 Water Sampling

Sampling must be performed by an experienced person according to DIN EN 25667-2 procedures. The mobile Microfiltration System MOT-7 must be set in the operational mode.

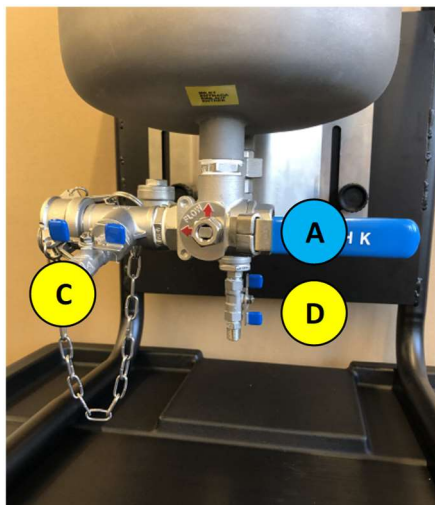

- After being prepared based on DIN EN 2557-2, the water sample can be taken by opening the sampling valve D.

7 Maintenance and Service


7.1 Honda Handbook reference



Please refer to the accompanying Honda Manual regarding the correct handling of the high-pressure pump WH 20X. Both this manual and the manual from Honda must be read and completely understood.

Your safety depends on it!

7.2 Cleaning the filter elements

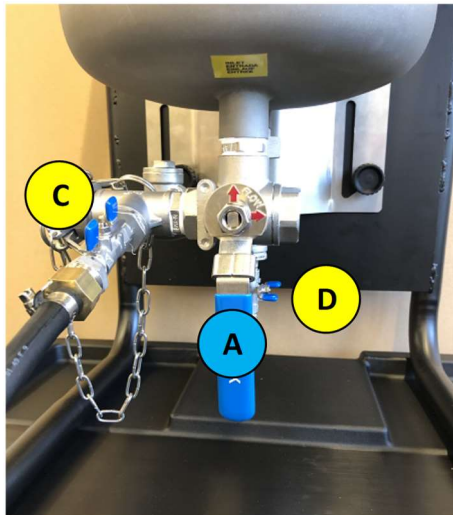

- Check to be sure the main valve A is in a vertical position (emptying)
- Open the clamp ring and remove the cover
- Open cleaning valve C (vertical)
- Put the cleaning brush over the filter element and move it up and down 6-8 times and, at the same time, flush with water from the pump (For this process, water must not be filtered). Repeat the process as needed until the surface of the filter element is clean. In addition to the dirt particles that will be removed, some of the ceramic will also be rubbed off in the process. That is completely normal and desirable. In that way, you will be assured that the filter element has totally new filter characteristics when cleaning is completed.
- Repeat the above procedure on all filter elements.
- Check the filter elements using the measuring gauge. To do so, refer to Paragraph 7.3 in this manual: "Examining the filter elements."
- Clean the filter elements and inside of the housing with the cleaning hose.
- Close cleaning valve C. Replace the cover.
- Either fill the MOT-7 again or dry it for storage. Then place the filter elements in their storage positions as previously illustrated.
- Before storage, the filter elements must air dry for at least two days.

7.3 Examining the filter elements

Examination of the thickness of the ceramic wall must be done with the measuring gauge provided. As soon as the gauge can be pushed over the ceramic, it means it has reached its minimum thickness, and the filter element must be replaced. In addition, elements showing signs of cracks must also be immediately replaced.

7.4 Troubleshooting Guide

Problem	Possibilities	Solution
Filter delivers low water quantities	Dirty filter element	Clean the filter element
	Valve is closed	Turn the valve to a horizontal position
	Sampling valve open	Close the sampling valve
	Pump unit delivers too little water	Motor is not running at the max speed
	Suction filter not completely covered in water or dirty	Optimize the suction filter. Clean the filter.
	Suction filter positioned poorly (e.g. in sediment)	Optimize the suction filter's position.
	Loss of pressure in the filter system	Check the entire MOT-7 system for water leakage
Unsatisfactory water quality	Filter element broken	IMMEDIATELY replace the filter element
	Filter element needs replacing	IMMEDIATELY replace the filter element
	Filter element has hairline cracks	IMMEDIATELY replace the filter element

8 Contact information

Katadyn Products Inc.
Pfäffikerstrasse 37
8310 Kemptthal
Switzerland
Tel +41 44 839 21 11 | Fax +41 44 839 21 99
info@katadyn.ch | www.katadyngroup.com

9 Replacement Parts and Filters

Product-Number	Description	Picture
7010719	V-Band Clamp M-MOT7; MF-7	
7010985 (SET)	Connection Hose Pump to Filter M-MOT7; complete	
7010986 (SET)	Drinking Water Hose M-MOT7 complete	
20621 (SET)	Cleaning Hose M-MOT7 complete	
20616	Cleaning Brush for Katadyn Filter elements	
20335	Measurement gauge for Katadyn Filter elements	
7010095	1/4" butterfly Vent Valve V4A	

7010978	Swivel nut / BT / M8	
1250	Katadyn Filter element No. 5	
128031	O Ring Seal 268 x 16mm	
7011654	Suction Hose M-MOT7 incl. coupling to Pump.	
20615	1 Pair of Brush Segments, Nylon	
20619	1 Pair of Brush Segments, Bronze Option for difficult residue	